

## Oiler can be filled from the top or bottom





**Top Side Filling:** Remove the black fill plug and fill with lubricant.





Bottom Side Filling: Pull the release lever downward and twist the entire bowl to the right or left while pulling downward. Remove the bowl and fill with lubricant.

## RECOMMENDED LUBRICANTS

## **Chesterton 652**

Great all purpose lube
Operating Temperature:
-10° to 300°





## Kilfrost K400

Great for freezing temperatures
Operating Temperature:
-76° to 230°